




Assembly Instructions for Foeldeak® Impact Protection Standard

Step 1

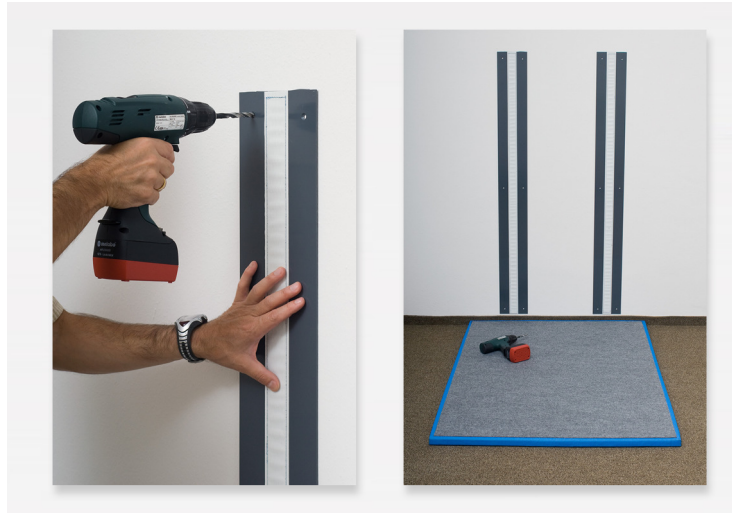

Step 2



Note:

Roughen the felt to improve the grip.
Use a steel brush or a notched trowel.

Step 3

